0-10V LED Driver 96 watt - Installation Instructions

Models PS010V-96-24-LIN, PS010V-96-24-LOG

Please read all instructions prior to installation and keep for future reference!

This LED Driver is to be installed in accordance with Article 450 of the National Electrical Code. The LED Driver must be installed in a well ventilated area and free from explosive gases and vapors. Proper operation requires the free flow of air as this LED Driver is hardwired, it should only be installed by a qualified electrician. Suitable For Damp Location.


PLENUM FOR SUCH USE IN ACCORDANCE WITH UL2043


REV1.2 06222023 7777 Merrimac Ave Niles, IL 60714 T 224.333.6033 F 224.757.7557 info@luminii.com www.luminii.com


™ III ∩ I ∩

1/2


Input	120 - 277 V AC, 1.1 A, 50/60 Hz
Output	24 V DC, 4.0 A
Max. Wattage	96 W

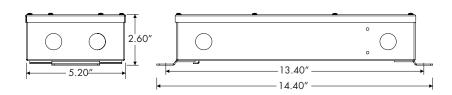

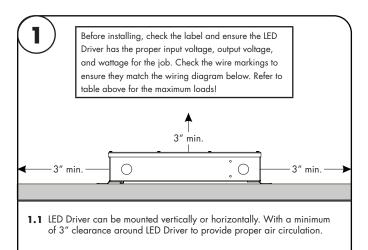

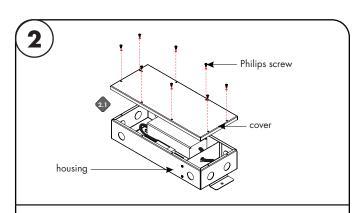

2.1 Remove the eight Phillips screws from the top of the driver housing and pull the cover off to expose the driver wires.

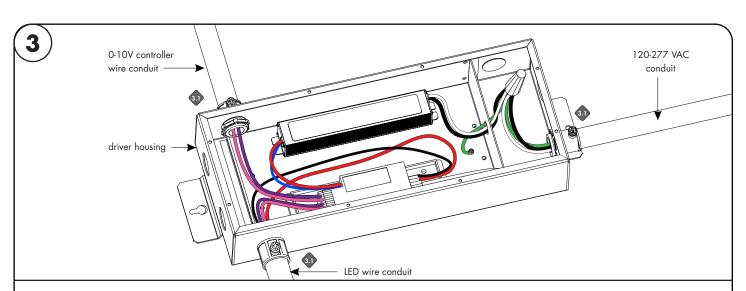

3.1 Insert the 120-277V AC power into the driver housing from the electrical panel. Followed by bringing 24V DC low voltage conduit one for the LED & other for controller wires. Refer to diagram on page 2 to make all the proper wiring connections.

0-10V LED Driver 96 watt - Installation Instructions

Models PS010V-96-24-LIN, PS010V-96-24-LOG

Please read all instructions prior to installation and keep for future reference!

This LED Driver is to be installed in accordance with Article 450 of the National Electrical Code. The LED Driver must be installed in a well ventilated area and free from explosive gases and vapors. Proper operation requires the free flow of air as this LED Driver is hardwired, it should only be installed by a qualified electrician. Suitable For Damp Location.

PLENUM FOR SUCH USE IN ACCORDANCE WITH UL2043

REV1.2 06222023 7777 Merrimac Ave Niles, IL 60714 T 224.333.6033 F 224.757.7557 info@luminii.com www.luminii.com

₽ III UMIC

2/2

