DALI LED Driver 96 watt - Installation Instructions

Models PS-DALI-DT8-D-96-24-AWNR

Please read all instructions prior to installation and keep for future reference!

This LED Driver is to be installed in accordance with Article 450 of the National Electrical Code. The LED Driver must be installed in a well ventilated area and free from explosive gases and vapors. Proper operation requires the free flow of air AS this LED Driver is hardwired, it should only be installed by a qualified electrician. Suitable For Dry Location.

REVO.2

12112023

 
Niles, IL 60714 T 224.333.6033 F 224.757.7557 info@luminii.com www.luminii.com


7777 Merrimac Ave

௸տ **∭**UMi∩


1/2

Input	120 - 277 V AC, 1.1 A, 50/60 Hz
Output	24 V DC, 4.0 A
Max. Wattage	96 W



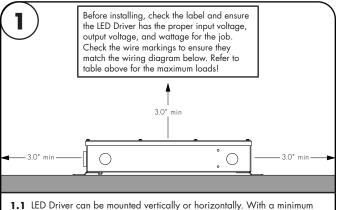

- cover housing
 - 2.1 Remove the cover from top of the driver housing to expose the driver wires. Screws for cover will be found inside the housing.
- of 3" clearance around LED Driver to provide proper air circulation.
- 1.2 Ensure that the Lutron Athena Wireless node has at least 1" clearance from any metal such as conduit.

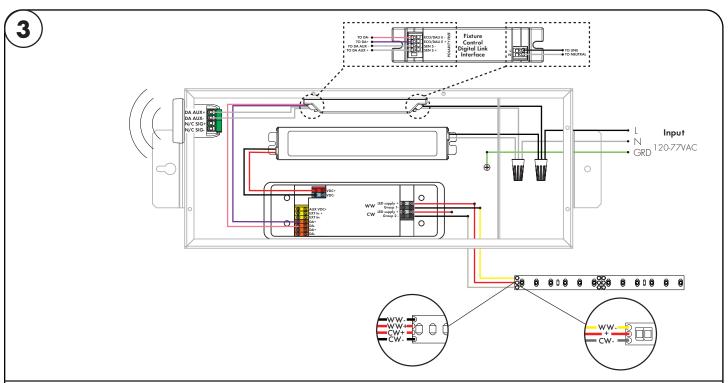

3.1 Insert the 120-277V AC power into the driver housing from the electrical panel. Followed by bringing 24V DC low voltage conduit one for the LED & other for controller wires.

DALI LED Driver 96 watt - Installation Instructions

Models PS-DALI-DT8-D-96-24-AWNR

Please read all instructions prior to installation and keep for future reference!

This LED Driver is to be installed in accordance with Article 450 of the National Electrical Code. The LED Driver must be installed in a well ventilated area and free from explosive gases and vapors. Proper operation requires the free flow of air AS this LED Driver is hardwired, it should only be installed by a qualified electrician. Suitable For Dry Location.

PLENUM FOR SUCH USE IN ACCORDANCE

REVO.2 12112023

2/2



Niles, IL 60714 T 224.333.6033 F 224.757.7557 info@luminii.com www.luminii.com

