Myka Trimmed Recessed - Installation Instructions

Models MKR-XX, MKRA-XX

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN. 5. SURFACE MOUNT ONLY

7. INHERENTLY PROTECTED

- 6. SUITABLE FOR INSTALLATION WITHIN THE CLOSET STORAGE SPACE. 2. USE ONLY WITH CLASS 2 POWER UNIT.
- 3. 24 VOLTS DC.
- 4. SUITABLE FOR DAMP LOCATIONS




₽ IIIUminii


Niles, IL 60714 T 224.333.6033 F 224.757.7557 info@luminii.com www.luminii.com

REVO.1 01302024


1/2

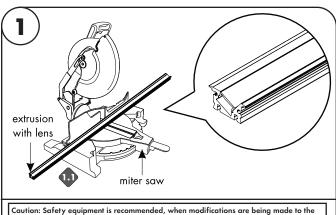



If necessary extrusion & lens can be cut in the field. Using the proper blade for aluminum, cut to the desired length.

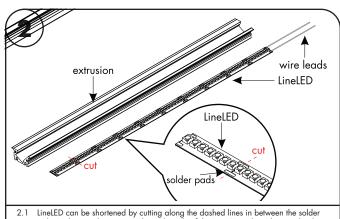

pads. Make sure the cut is made on the side of the LineLED without the wire leads. LineLED cannot touch the metal endcap which will shorten the circuit

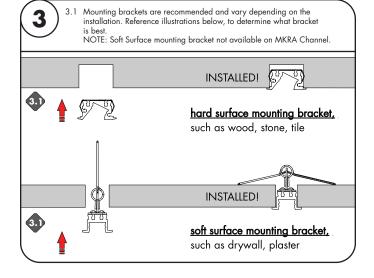

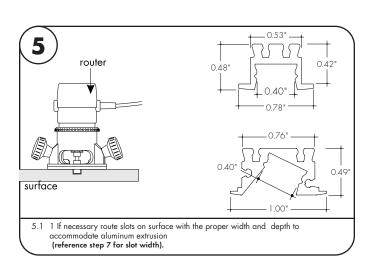

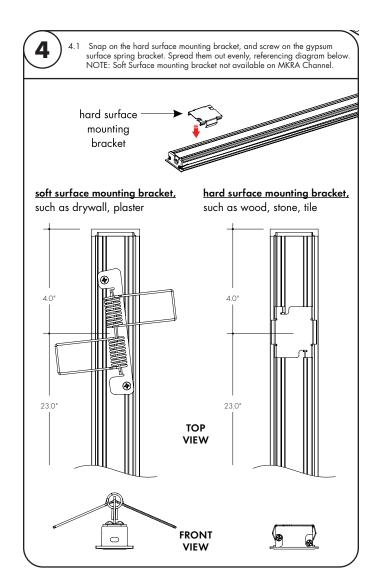

Myka Trimmed Recessed - Installation Instructions

Models MKR-XX, MKRA-XX

Please read all instructions prior to installation and keep for future reference!

- 1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN. 5. SURFACE MOUNT ONLY
- 6. SUITABLE FOR INSTALLATION WITHIN THE CLOSET STORAGE SPACE. 2. USE ONLY WITH CLASS 2 POWER UNIT.
- 3. 24 VOLTS DC.
- 4. SUITABLE FOR DAMP LOCATIONS.


7. INHERENTLY PROTECTED





Niles, IL 60714 T 224.333.6033 F 224.757.7557 info@luminii.com www.luminii.com


REVO.1 01302024

2/2

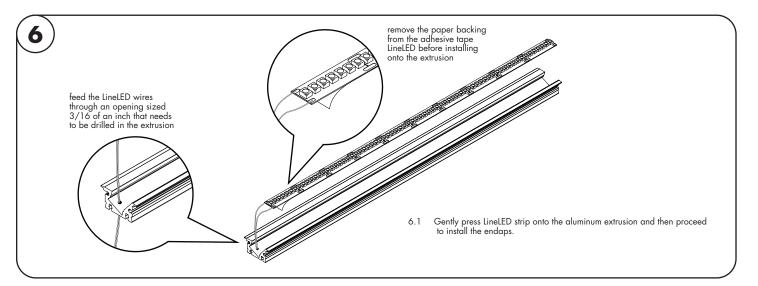


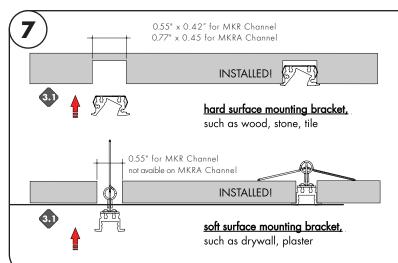






- For hard surface mounting bracket: Align the extrusion mounting brackets to the slot, then carefully push the extrusion completely inside to secure.
- For soft surface mounting bracket: Bend the adjustable spring to the a straight position, follow by pushing the extrusion completely inside the slot. Then release the springs to secure

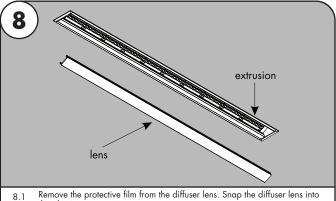

- If you are installing the Myka blade louver, please install carefully. Once the blade louver is installed, <u>it cannot be removed without damaging it.</u> NOTE
 - If installing facing up in wet locations, apply silicone to the edges of the endcaps. Followed by applying silicone to the edge between the lens and extrusion, make sure to clean off any excess silicone.

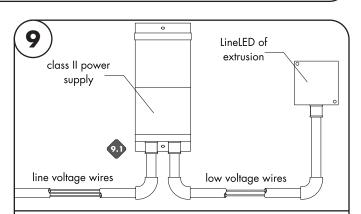

Ensure the correct (wattage & voltage) power supply is used to power LineLED. Then proceed to connect LineLED wires from extrusion to power supply. For more information please refer to power supply and LineLED wiring instructions.