
RO1.5 Channel - Installation Instructions




Please read all instructions prior to installation and keep for future reference!

- 1. Product should be installed by a qualified electrician.
- 2. Prior to installation ensure power is off at fuse box to prevent electrical shock.


T 224.333.6033 www.opticarts.com

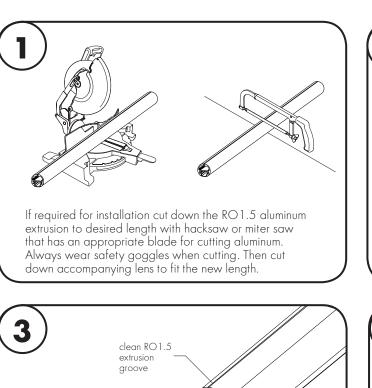

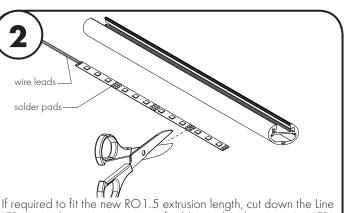

Page 1 of 1

LED strip in between two rows of solder pads. Always cut LineLED from end without connector / lead wires. Ensure that Line LED strip fits **completely** inside the extrusion and the solder pads do not touch the metal end caps to avoid shorting of circuit.

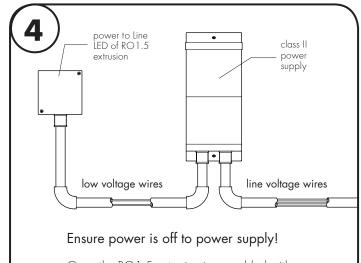

Once the RO1.5 extrusion is assembled with all parts and accessories, connect wires from Line LED to appropriate power supply. For more information please refer to power supply and Line LED wiring instructions.

Remove the protective film from the lens.

on the lens.

remove paper backing from Line LED strip

After cutting extrusion and lens, clean both thoroughly with a

wet rag and ensure they are completely dry before installing

LED strip. Gently press Line LED inside extrusion and then snap

snap on lens

film

wires to

power supply